

Tecno⁺

คู่มือการใช้งานเตาอบไฟฟ้า

TNP SO 863 B




CE CB RoHS

สารบัญ

ส่วนประกอบเตา	3
ข้อควรระวัง	4
การใช้งาน	5
การทำความสะอาด	6

ส่วนประกอบของเตาอบ

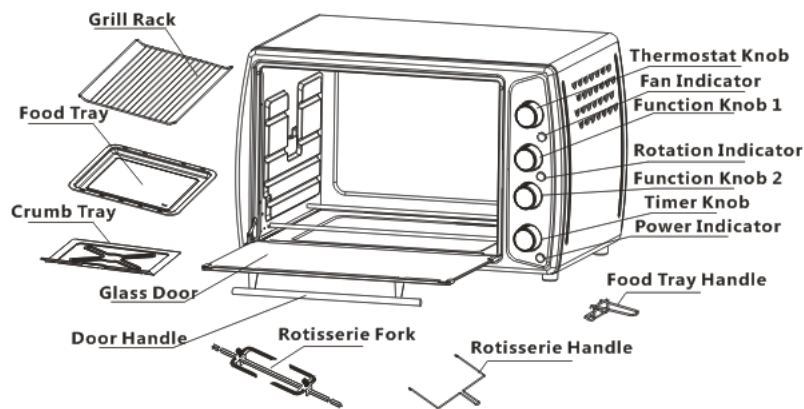

Grill Rack –	ตะแกรงย่าง
Food Tray –	ถาดใส่อาหาร
Crumb Tray –	ถาดรองเศษอาหาร
Glass Door –	ประตูเตาอบวัสดุกระจก
Door Handle –	ด้ามจับบานประตูเตาอบ
Rotisserie Fork –	แกนเสียบปิ้งย่าง
Rotisserie Handle –	ที่จับแกนเสียบปิ้งย่าง
Food Tray Handle –	ที่จับถาดอาหาร
Thermostat Knob –	ลูกบิดควบคุมอุณหภูมิ
Fan Indicator –	ไฟแสดงสถานะการทำงานพัดลม
Function Knob 1 –	ลูกบิดควบคุมโปรแกรมการใช้งาน
Rotation Indicator –	ไฟแสดงสถานะการทำงานฟังก์ชันแกนย่าง
Function Knob 2 –	ลูกบิดควบคุมโปรแกรมการทำงานขดลวดทำความร้อน (Heater)
Timer Knob –	ลูกบิดควบคุมการตั้งเวลาปรุงอาหาร
Power Indicator –	ไฟแสดงสถานะการทำงาน



ข้อควรระวังในการใช้งาน

คำเตือนในการใช้งาน

1. กรุณาอ่านและศึกษาคู่มือการใช้งานอย่างละเอียด ก่อนการใช้งานสินค้า
2. อย่าสัมผัสพื้นผิวที่มีความร้อน ยกเว้นบริเวณลูกบิดหรือด้ามจับบานประตูเตาอบ
3. ไม่ควรให้เด็กอยู่ใกล้กับเตาอบ ในขณะที่เปิดใช้งาน และควรใช้งานอย่างระมัดระวัง
4. เพื่อป้องกันไฟฟ้าดูด อย่าให้ส่วนใดส่วนหนึ่งของเตาอบ รวมทั้งสายไฟไดโนน้ำ หรือ ของเหลวอื่นๆ
5. ระวังไม่ให้สายไฟของเตาอบ สัมผัสกับบริเวณพื้นผิวที่มีความร้อน
6. ระวังไม่ให้สายไฟของตัวเตาอบ สัมผัสกับบริเวณพื้นผิวเตาอบที่มีความร้อน หากพบว่าสายไฟมีการชำรุดเสียหายให้เปลี่ยนทันที
7. ขณะใช้งานให้เว้นระยะห่างระหว่างผนังกับเตาอบอย่างน้อย 4 นิ้ว เพื่อให้มีการถ่ายเทของอากาศ
8. ถอดปลั๊กไฟ เมื่อเลิกใช้งาน หรือ ทำความสะอาดเตาอบ, ก่อนทำความสะอาด ควรรอให้เตาอบเย็นก่อน
9. เมื่อใช้งานเสร็จ ให้ปิดสวิทช์การทำงานของเครื่อง ก่อนที่จะดึงปลั๊กไฟออก อย่าใช้วิธีการดึงสายไฟเพื่อถอดปลั๊กไฟ
10. ห้ามคลุมถาดอาหารหรือชิ้นส่วนอื่นๆ ของเตาอบด้วยกระดาษฟอยล์ เพราะอาจทำให้อุณหภูมิความร้อนภายในเตาอบสูงมากเกินไป
11. อย่าทำความสะอาดเตาอบโดยใช้ฟอยล์ขัดที่เป็นโลหะ เพราะจะทำให้ไฟรั่วได้ หากบริเวณที่มีฉนวนเคลือบถูกขัดออกไป
12. ห้ามนำอาหาร หรือภาชนะที่มีขนาดใหญ่เกินไปใส่ไปในเตาอบ เพราะอาจทำให้เกิดไฟฟ้าลัดวงจรได้
13. ห้ามให้ชิ้นส่วนของวัสดุที่สามารถติดไฟได้ มาสัมผัสกับเตาอบ หรือนำวัตถุที่เป็นเชื้อไฟใส่ในเตาอบ
14. ควรเลือกภาชนะใส่อาหารที่เหมาะสม กับการใช้งานเตาอบ
15. ห้ามวางสิ่งของเหล่านี้ ในเตาอบ อาทิเช่น แผงวงจรไฟฟ้า พลาสติก กระดาษ หรืออื่นๆ ที่มีลักษณะคล้ายกัน
16. ห้ามเก็บภาชนะ หรือ อุปกรณ์เสริมอื่นๆ ที่ไว้ในเตาอบ นอกเหนือจากคำแนะนำที่ระบุในคู่มือ
17. ควรใช้ถุงมือ จับถาด หรือชิ้นส่วนอาหารที่อบ เมื่อนำออกมาจากเตาอบ
18. กระจกของเตาอบไฟฟ้า เป็นกระจกนิรภัยจึงมีความแข็งแรงมากกว่ากระจกธรรมดา ห้ามนำของแข็งอื่นๆ มาถู หรือ กระแทก เพราะจะทำให้กระจกเสียหายได้
19. สินค้านี้ใช้เฉพาะภายในครัวเรือน เท่านั้น
20. ส่วนต่างๆ ของเตาอบจะร้อนขึ้น ขณะเปิดใช้งาน
21. หากสายอ่อนป้อนกำลังไฟฟ้าชำรุด ต้องให้ผู้ทำ หรือตัวแทนฝ่ายบริการหรือบุคคลที่มีคุณสมบัติเหมือนกันเป็นผู้เปลี่ยนเพื่อหลีกเลี่ยงอันตราย
22. เครื่องใช้ไม่มีเจตนาให้ทำงานด้วยตัวตั้งเวลาภายนอกหรือระบบควบคุมระยะไกลแยกต่างหาก

การใช้งาน

ก่อนการใช้งานเตาอบครั้งแรก

1. อ่านและศึกษาคู่มือการใช้งานอย่างละเอียด
2. ตรวจสอบให้แน่ใจว่าไม่ได้เสียบปลั๊กไฟไว้ และลูกบิดควบคุมการตั้งเวลาอยู่ที่ตำแหน่ง 0
3. ถอดอุปกรณ์เสริมทั้งหมดออกและนำไปล้างทำความสะอาดด้วยน้ำผสมสบู่
4. เมื่ออุปกรณ์ต่างๆ แห้งดีแล้ว ประกอบกลับเข้าไปในตัวเครื่องเหมือนเดิม เสียบปลั๊กไฟเพื่อเริ่มใช้งาน
5. การเปิดเครื่องใช้งานครั้งแรก ควรเปิดเตาทิ้งไว้ประมาณ 15 นาที เพื่อให้สารที่เคลือบอุปกรณ์

ถูกความร้อนละลายออก สารเคลือบนี้จะไม่เป็นอันตรายกับผู้ใช้งาน แต่จะมีกลิ่นเมื่อเปิดใช้งานเตาในครั้งแรก จึงควรวางเตาอบในที่ที่มีอากาศถ่ายเทได้สะดวก


โปรดศึกษาฟังก์ชันการใช้งานและอุปกรณ์เสริมด้านล่างให้เข้าใจก่อนเริ่มใช้งานจริง

- ลูกบิดควบคุมอุณหภูมิ: เลือกอุณหภูมิที่ต้องการระหว่าง 100°C ไปจนถึง 250°C
- ไฟแสดงสถานะการทำงานพัลลม: ไฟแสดงสถานะจะส่องสว่างขึ้นเมื่อมีการเปิดใช้ฟังก์ชันพัลลม
- ลูกบิดควบคุมโปรแกรมการใช้งาน: ประกอบด้วยฟังก์ชัน: ปิดการทำงาน, พัลลมกระจายความร้อน, แขนย่าง, พัลลมกระจายความร้อนพร้อมแขนย่าง
- ไฟแสดงสถานะการทำงานฟังก์ชันแขนย่าง: ไฟแสดงสถานะจะส่องสว่างขึ้น เมื่อมีการเปิดใช้งานแขนย่าง
- ลูกบิดควบคุมโปรแกรมขดลวด ทำความร้อน: ประกอบด้วยฟังก์ชัน: ปิดการทำงาน, โปรแกรมอบไฟบน, โปรแกรมอบไฟล่าง, โปรแกรมอบมาตรฐาน (ไฟบน-ล่าง)
- ลูกบิดควบคุมการตั้งเวลา: หมุนลูกบิดไปทางขวา เพื่อเริ่มต้นการใช้งาน เมื่อครบกำหนดเวลาที่ตั้งไว้เครื่องจะหยุดการทำงานอัตโนมัติและจะมีเสียงดังเตือน ถ้าหากต้องการตั้งเวลาทำงานต่ำกว่า 5 นาที ให้หมุนลูกบิดเลยจุด 5 นาทีไปเล็กน้อย แล้วค่อยหมุนกลับมายังเวลาที่ต้องการ
- ตะแกรงย่าง: ใช้สำหรับบั้ง อบ และประกอบอาหารทั่วไป

หมายเหตุ: การวางตะแกรงที่ถูกต้อง คือ ให้ฐานตะแกรงคว่ำลงดังภาพ



CORRECT



WRONG

- ถาดใส่อาหาร: ใช้ในการบั้งหรืออบเนื้อ, ไก่, ปลา และอาหารอื่นๆ
- ถาดรองเศษอาหาร : ใช้ในการรองเศษอาหารที่อาจหล่นลงมาระหว่างการปรุง ช่วยให้การทำมาสะอาดเตาอบสะดวกง่ายดายยิ่งขึ้น

ขั้นตอนในการใช้งาน

- จัดวางอาหารลงบนตะแกรงย่างหรือถาดใส่อาหารให้เรียบร้อย
- ปิดประตูเตาอบ
- หมุนลูกบิดควบคุมอุณหภูมิ เพื่อเลือกระดับความร้อนที่ต้องการ
- หมุนลูกบิดควบคุมการตั้งเวลา เพื่อเริ่มใช้งาน
- เมื่อใช้งานเสร็จสิ้นแล้ว หมุนลูกบิดควบคุมการตั้งเวลาไว้ที่ค่า 0

การทำความสะอาดและดูแลรักษา

การดูแลรักษา:

ควรดูแลรักษาและทำความสะอาดอุปกรณ์อย่างถูกวิธี เพื่อประสิทธิภาพในการใช้งานและอายุการใช้งานในระยะยาว

คำเตือน ก่อนลงมือทำความสะอาดใดๆ ตรวจสอบให้แน่ใจว่าไม่ได้เสียบปลั๊กไฟไว้





การทำความสะอาด:


เพื่อป้องกันไฟฟ้าช็อต หลีกเลี่ยงการทำให้สายไฟหรือปลั๊กไฟเปียกน้ำ การทำความสะอาดเตาอบ ด้านนอกควรใช้ผ้าชุบน้ำหมาดๆ สำหรับการทำความสะอาดด้านในเตาอบให้ใช้ผ้าชุบน้ำผสมน้ำยา ทำความสะอาดอ่อนๆ อุปกรณ์เสริมต่างๆ ให้ทำความสะอาดด้วยน้ำร้อน ส่วนประตูเตาอบให้ทำความสะอาดด้วยผ้าชุบน้ำหมาดๆ และเช็ดให้แห้งด้วยผ้าแห้ง

ห้ามใช้ฟอยเหล็กขัด เพราะอาจจะทำให้สารเคลือบผิวเตาอบเสียหาย เมื่อทำความสะอาดเสร็จ ควรรอให้เตาอบแห้งก่อน จึงจะทำการใช้งานครั้งต่อไป

การเก็บรักษา:

เมื่อใช้งานเสร็จ ควรถอดปลั๊กไฟและทำความสะอาดตามคำแนะนำในแต่ละขั้นตอน หลังจาก อุปกรณ์แห้งแล้วให้นำเตาอบเก็บใส่กล่อง และเก็บในบริเวณที่แห้งและสะอาด ห้ามเก็บเตาอบ ในขณะที่ยังมีความร้อนเหลืออยู่ ไม่ควรม้วนสายไฟพันรอบๆ ตัวเครื่อง แต่ให้เก็บสายไฟในบริเวณ ด้านหลังตัวเครื่อง

	ระวัง อาจเกิดไฟฟ้าช็อตได้หากใช้งานผิดวิธี	
	ห้ามเปิด สัญลักษณ์ไฟฟาลูกศรชี้ลง เป็นการเตือนผู้ใช้งานถึงความเสี่ยงในการใช้งานสินค้าที่มี การใช้ไฟฟ้าในอัตราที่มาก อาจเกิดเหตุการณ์ไฟฟ้าช็อตได้ ในกรณีที่มีการใช้งาน ผิดวิธี	
	สัญลักษณ์เครื่องหมายตกใจ เป็นการเตือนให้ผู้ใช้งานศึกษาคู่มือการใช้งานให้เข้าใจ ก่อนเริ่มใช้เพื่อความปลอดภัย	



ระวัง!

อุณหภูมิของตัวเครื่องอาจสูงขึ้นขณะใช้งาน

ข้อมูลทางเทคนิค

ชื่อรุ่น	TNP SO 863 B
ความจุเตาอบ	63 ลิตร
แรงดันไฟฟ้า/ความถี่	220V~, 50 Hz
กำลังไฟฟ้า	2200 วัตต์

การเป็นมิตรกับสิ่งแวดล้อม



เมื่อผลิตภัณฑ์หมดอายุการใช้งาน ไม่สามารถทิ้งรวมกับขยะทั่วไปได้ ต้องคัดแยก เพื่อนำไปย่อยสลายด้วยวิธีพิเศษ

Electric Oven


USER'S MANUAL



Model No. : TNP SO 863 B

Many thanks for purchasing this electric oven. We would particularly advise that you carefully read the operating instructions before attempting to operate the unit.

PARTS IDENTIFICATION

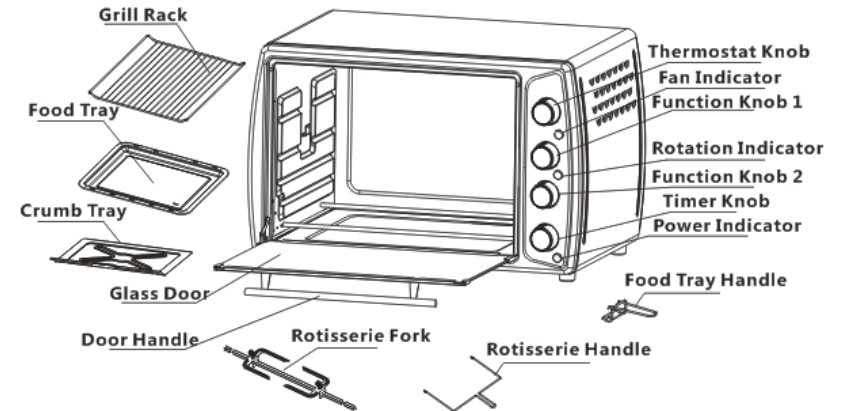

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliances are used by or near children.
4. To protect against electric shock, do not place any part of the electric oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
8. Unplug from outlet when not in use, or before cleaning.
9. To disconnect, turn the timer to "0", then unplug the plug. Always hold the plug, but never pull the cord.
10. Do not cover BAKE TRAY or any part of oven with metal foil. This may

cause over heating of the oven.

11. Do not clean with metal scouring pads.
12. Oversized foods or metal utensils must not be inserted in an electric oven as they may create a fire or risk of electric shock.
13. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
14. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
15. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
16. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
17. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
18. This appliance has a tempered ,safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, do not use.
19. Do not use outdoors.
20. Do not use appliance for other than intended use.
21. This appliance is for HOUSEHOLD USE ONLY.
22. The temperature of the door or the outer surface may be higher when the appliance is working.
23. If the cord wire has any malfunctions, any replacement or adjustment must be done only by the manufacturer or representative of distributing company.
24. The appliance is not meant to be used with external timer or remote control.

HOW TO USE

PREPARATION BEFORE USE

Before using your electric oven for the first time, be sure to:


1. Read all instructions included in this manual.
2. Make sure oven is unplugged and Time Knob is in the "0" position.
3. Remove all accessories. Wash in hot soapy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new electric oven with Grill Rack and Food Tray.
5. It may resu It in smell or smoke for the first use. This is normal. It is due to the protective substance on heating elements, which avoids salt effects during shipping from factory. So it is recommended operating oven dry for about 15 minutes at the first, moreover, making sure to keep good ventilation of the room .

Please familiarize yourself with the following oven functions and accessories prior to first use:

- Temperature Knob : Choose desired temperature from 100°C to 250°C.

- Fan Indicator : It is illuminated whenever we are using convection function.
- Function Knob 1 : Choose desired function : OFF, Convection, Rotisserie, Convection+Rotisserie.
- Rotation Indicator : It is illuminated whenever we are using rotisserie function.
- Function Knob 2 : Choose desired heating stage: OF F, Upper Heating, Lower Heating, Dual Heating.
- Timer Knob : Turn control to the right (clockwise) and the oven will turn off automatically at the end of the selected time and a bell will ring. When setting the Timer to less than 5 min, turn it to more than 6 min. and then back to the selected time.
- Power Indicator : It is illuminated whenever oven is turned on.
- Grill Rack : For toasting, baking, and general cooking in casserole dishes and standard pans.

Note : Wire Rack should be positioned with the indentations pointing down.

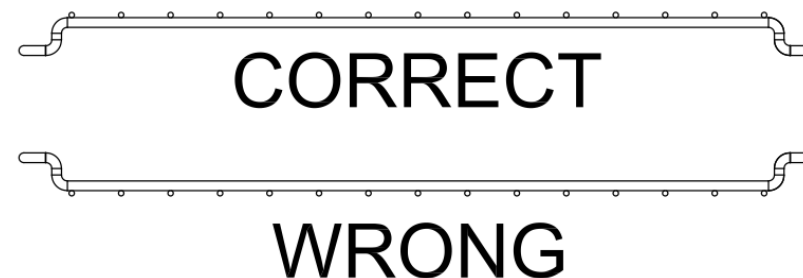

- Food Tray : For use in broiling and roasting meat, poultry, fish, and various other foods.
- Crumb Tray : For use in holding crumbs made during oven working, easy for oven cleaning

Operation

- Place food to be cooked directly on to wire rack /in food tray.
- Close the oven door
- Select proper temperature by the Temperature Knob.
- Pre set proper cooking time and start the oven.
- Make sure to turn Timer Knob to "0" for turning off the oven when cooking is completed.

CLEANING AND CARE

MAINTENANCE :

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

Warning! Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

CLEANING:

To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid. The exterior surface of the appliance should be cleaned with a clean damp cloth only.




The oven features a Quick-Clean internal coating. If desired, wipe walls with damp cloth moistened with mild detergent.

Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door with a clean damp cloth, and dry with a paper or cloth towel. Clean exterior with damp cloth.

**DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE.
ALWAYS UNPLUG THE OVEN AND ALLOW IT COOLING BEFORE
CLEANING
DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING
OVEN IN AND USING!**

STORAGE :

Unplug unit, allow cooling, clean before storing. Store Electric Oven in its box in a clean, dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the back of the oven. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

	CAUTION RISK OF ELECTRIC SHOCK	
	DO NOT OPEN The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure:	

that may be of sufficient magnitude to constitute a risk of electric shock to person.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



CAUTION!

Caution : The temperature of the accessible surface may be high when the appliance is operation.

SPECIFICATION

Model No.	TNP SO 863 B
Oven Capacity	63 Liter
Voltage	220V~
Frequency	50Hz
Power	2200W

WEE / ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment



The Signature Brand Co., Ltd.

771 Prachautis Rd., Samsenok, Huaykwang, Bangkok 10310 Tel. (66) 2 274 3434 (Automatic) Service Team : 088 008 0808 www.sbo-brand.com